


Installation Guide

1



Straight Runs: Work left to right as viewed from the ground. Lay Waterlock Pro completely flat over existing gutters with the front edge of the panel lined up with the top front edge of the gutter and slide the back end under the first shingle.

2

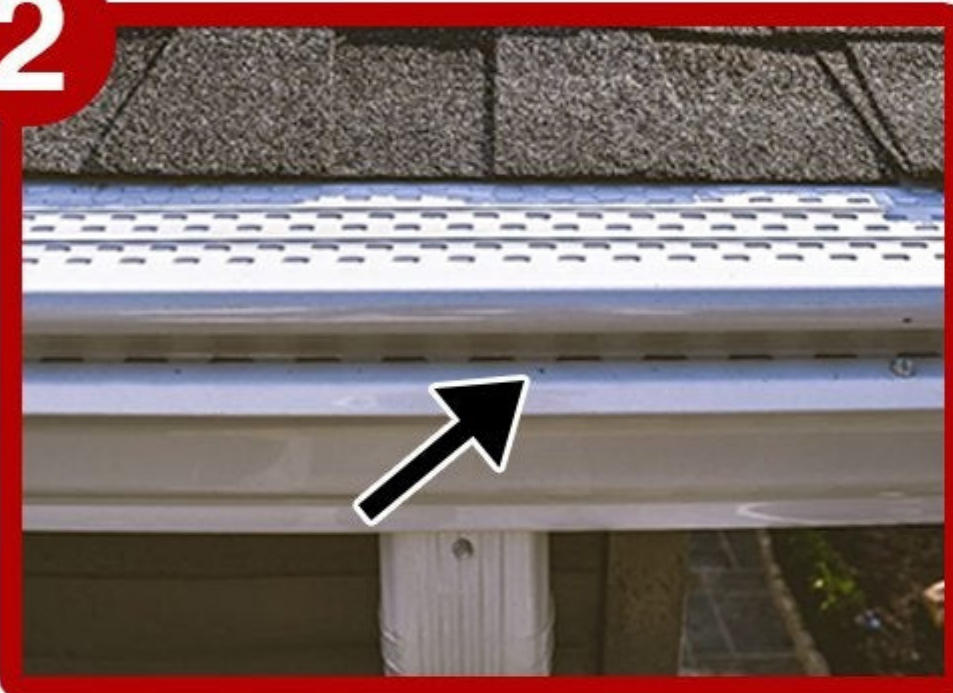

RECOMMENDED SCREW PATTERN

Rear Flange

Front Lip
of Gutter



The tab on the left end of each panel installs under the adjoining panel. Use screw holes along the front lip of Waterlock Pro to zip screw the panel - 3 or 4 screws (1, 2 & 3) to the front lip of the gutter. **DIAGRAM 2:** Shows screw holes along the front lip of Waterlock Pro.

3



FOR INSIDE CORNERS:

Cut a diagonal line from the front edge of Waterlock Pro to the back using a saw or snip scissor. Repeat for other piece. Place first piece on top of the other to connect the two pieces. Zip screw to gutter and you now have a seamless connection.

4



FOR OUTSIDE CORNERS:

Cut a diagonal line from the back of Waterlock Pro to the front edge using a saw or snip scissor. Repeat for other piece. Place first piece on top of the other to connect the two pieces. Zip screw to gutter and you now have a seamless connection.


Easy to Install

Interlocking Connection System



- *Each section fits on top of each other for a seamless connection*

- *Only requires 4 screws on front drip-edge and back slides under the shingle*

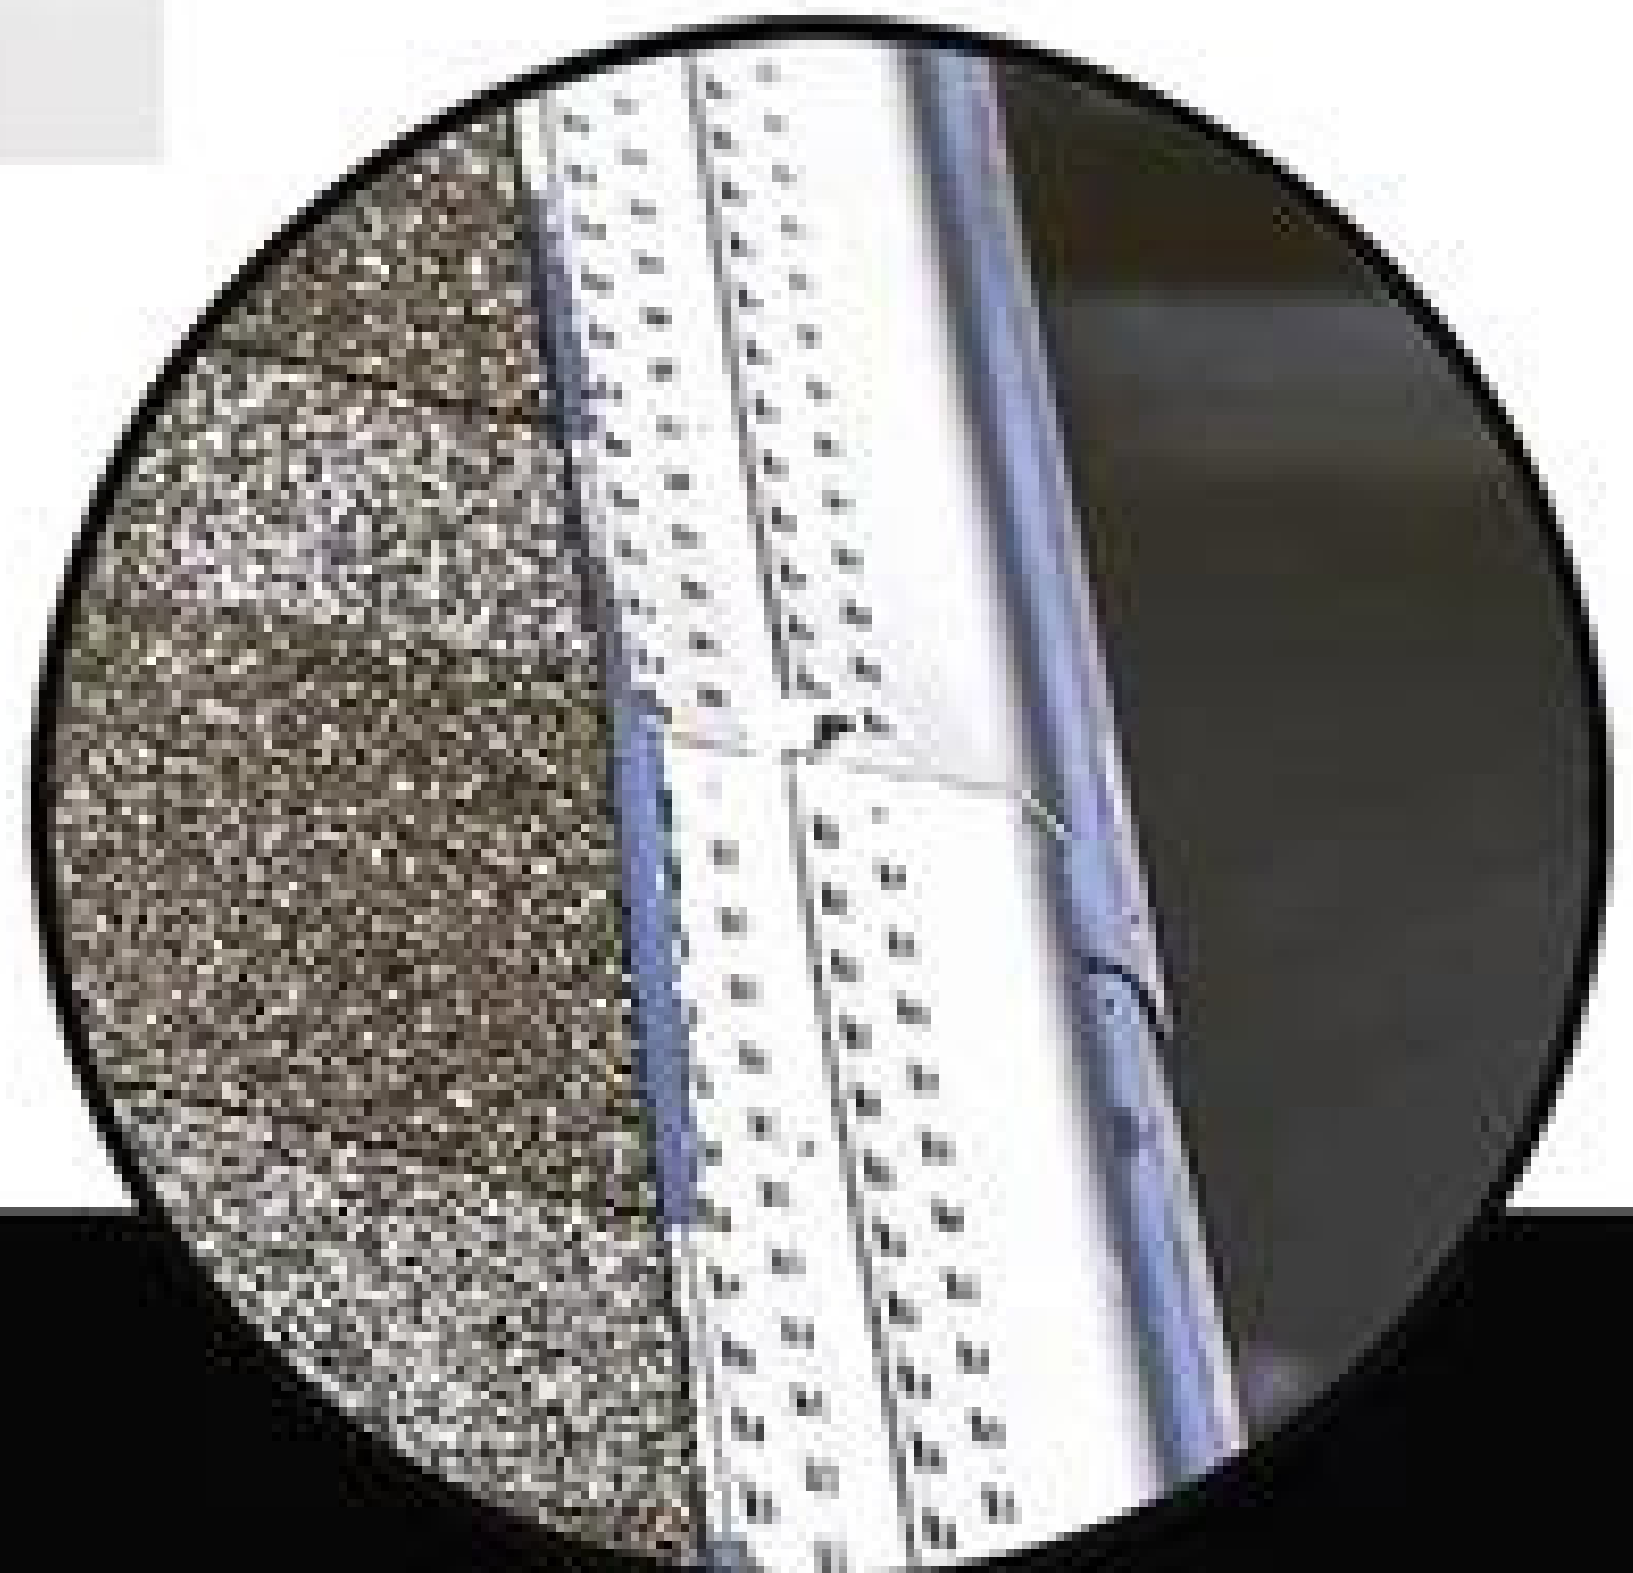

Painted Aluminum
Thick .027 gauge painted

Double Ribbed Frame
Controls water flow

Built-In Louvers
Keeps out leaves & slows down
heavy waterflow

Double Banded Back Edge
Stronger & straighter to fit
under the shingle
more easily

Drip-Edge Technology
Diverts water into gutter
& prevents overflow

Bottom Holes
Filter heavy rainwater into gutter

Double Banded Edges
No sharp edges for easy installation



Designed to fit both 5" and 6" gutters



HALF-ROUND GUTTER

Fits all gutter types and styles



K-STYLE GUTTER



Waterlock Pro